

Visit  
[TopNotchGarageDoors.com](http://TopNotchGarageDoors.com)



Garage Door Troubleshooting Flowchart: Step-by-Step Guide

Problem	Possible Causes	Troubleshooting Steps	Solution
<i>Garage Door Won't Open</i>	Power source issue, remote problem, or misaligned sensors	1. Check power supply. Ensure the opener is plugged in and powered. 2. Test remote control batteries. 3. Inspect safety sensors for alignment and dirt.	1. Plug in opener or reset breaker. 2. Replace remote batteries. 3. Clean and align sensors.
<i>Garage Door Won't Close</i>	Obstruction in the door path or sensor issue	1. Remove any obstructions from the door path. 2. Check safety sensor alignment and cleanliness. 3. Test remote and wall switch for operation.	1. Clear any obstructions. 2. Clean sensors and realign them. 3. Reset the opener.
<i>Garage Door Opens Slowly</i>	Lack of lubrication or worn-out parts	1. Inspect rollers and tracks for dirt or damage. 2. Check springs for wear or tension loss. 3. Lubricate hinges, rollers, and springs.	1. Clean tracks. 2. Lubricate all moving parts. 3. Replace worn-out springs or parts.
<i>Garage Door is Noisy</i>	Loose hardware, lack of lubrication, or worn parts	1. Inspect hinges, rollers, and tracks for dirt or damage. 2. Tighten all loose bolts, nuts, and screws. 3. Lubricate all moving parts.	1. Tighten loose hardware. 2. Lubricate regularly. 3. Replace worn-out rollers or hinges.
<i>Garage Door Stuck Halfway</i>	Balance issue or damaged spring	1. Disconnect the opener and manually lift the door. 2. Check for smooth operation without resistance. 3. Inspect springs for damage.	1. Adjust spring tension. 2. Replace broken springs. 3. Rebalance the door.
<i>Garage Door Reverses Before Closing</i>	Misaligned or dirty sensors	1. Check sensors for alignment and clean any debris. 2. Ensure nothing is blocking the sensors. 3. Test the auto-reverse function with a block under the door.	1. Realign and clean sensors. 2. Replace faulty sensors if needed.
<i>Garage Door Remote Not Working</i>	Dead batteries, out of range, or signal interference	1. Replace remote batteries. 2. Ensure you are within the range of the opener. 3. Check for signal interference from nearby devices.	1. Replace batteries. 2. Reset the remote. 3. Ensure no interference with signal.
<i>Garage Door Opens on Its Own</i>	Faulty remote, opener malfunction, or wiring issues	1. Check remote for stuck buttons. 2. Inspect wall switch for issues. 3. Disconnect opener for a few minutes and reconnect.	1. Replace remote if faulty. 2. Inspect opener wiring. 3. Reset the opener system.
<i>Garage Door Misaligned</i>	Off-track rollers, loose hardware, or bent track	1. Inspect tracks for bends or debris. 2. Check rollers for smooth operation. 3. Tighten track brackets and realign.	1. Clean and align tracks. 2. Replace damaged rollers. 3. Tighten brackets.
<i>Opener Makes Noise But Door Doesn't Move</i>	Broken springs or gear issues	1. Inspect torsion springs for breaks. 2. Listen for grinding noises from the opener. 3. Check opener gears.	1. Replace broken springs. 2. Replace stripped opener gears. 3. Call for professional repair.

**Explanation of Each Problem:**

- Garage Door Won't Open: Usually a power issue or remote malfunction. Begin by checking the power source, remote, and sensors.
- Garage Door Won't Close: Commonly caused by obstructions or sensor misalignment. Clear any debris, check the sensors, and reset if necessary.
- Garage Door Opens Slowly: Can result from a lack of lubrication or worn-out components. Lubricating the door parts and replacing old parts will solve it.
- Garage Door is Noisy: Noises often stem from loose or worn-out parts. Tighten hardware and lubricate moving parts.
- Garage Door Stuck Halfway: Indicates a possible balance issue or damaged spring. Inspect and rebalance the door, and replace broken springs.
- Garage Door Reverses Before Closing: Sensor problems or an obstruction can cause early reversal. Realign or clean the sensors and ensure nothing is blocking them.
- Garage Door Remote Not Working: Start with changing the batteries and ensure you're within range of the opener.
- Garage Door Opens on Its Own: A faulty remote or wiring issue could be causing random opening. Inspect the remote and opener wiring, and reset the system.
- Garage Door Misaligned: Off-track rollers or bent tracks can lead to misalignment. Check and realign the tracks or replace damaged rollers.
- Opener Makes Noise But Door Doesn't Move: Often caused by broken springs or gear issues in the opener. This usually requires professional repair or part replacement.

This can be done easily even from newbie.

■ TOP NOTCH ■  
GARAGE DOORS  
SAN FRANCISCO

CALL US: (415) 426-1340

TOP NOTCH  
GARAGE DOORS  
NAPA VALLEY

CALL US (707) 690-6169

